


# HIRSCH Mx Controller

## Quick Installation Guide

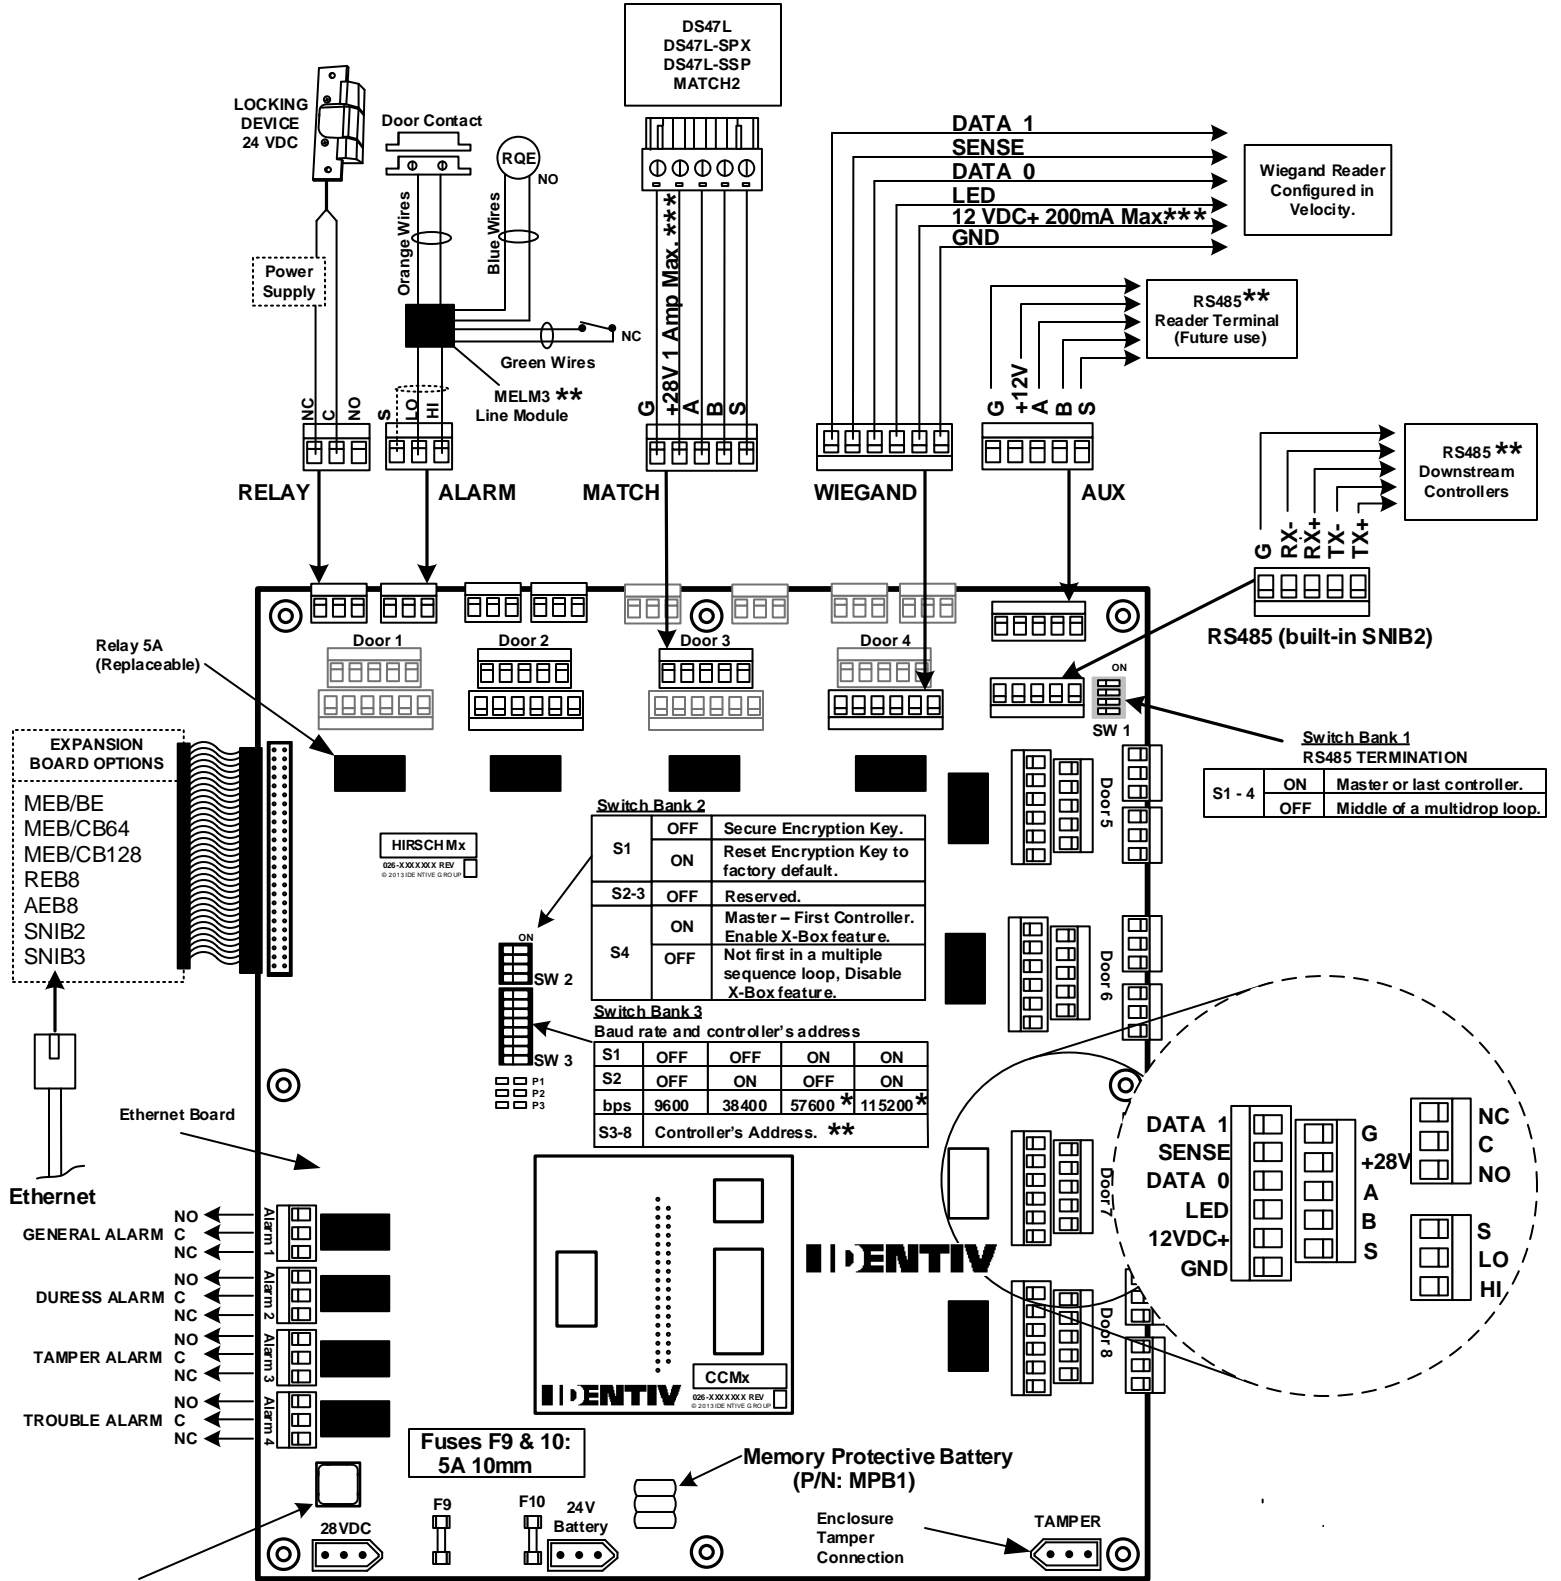

**Reset Button Functions:**

1 sec	= Resets all actuated alarm relays. Clears alarm buffer.
5 sec	= Resets System Code to 123.
30 sec	= Resets System, Clears all memory. (return to factory default)

**Notes:**

- \* Baud rates at 57600 and 115200 bps are only available if your RS485 cables are CAT5/ CAT6 data grade wire. These speeds are not recommended for installations using:
  - 18 to 22 gauge shielded twisted-pair cable
  - NET\*MUX4 (9600 baud ONLY)
  - Mixed SNIBs & SNIB2s
- \*\* For details, refer to the Mx Controller chapter of the Digi\*Trac Systems Design & Installation Guide.
- \*\*\* Each ScramblePad, MATCH2, and Wiegand terminal has its own resettable fuse.

