



Installation & User manual

For

uTrust SCRAMBLEPAD TS Version 1.2

Confidential

Author	Sudhan Immanuel G
Version	1.2
Date	27-Nov-2015
Document No	DS47L-SSP-TS02

Document History

Version	Date	Description of Change	Author
1.0	25-March-15	Initial version	Suresh Kumar T
1.1	26-Oct-15	Document updated after inputs from UL	Sudhan Immanuel G
1.2	27-Nov-15	Document updated after inputs from UL	Sudhan Immanuel G

uTrust Scramblepad TS

Contents

- 1.0 Introduction 4**
- 2.0 Reader 4**
 - 2.1 Functionality..... 4
 - 2.2 Front/Top Casing..... 4
 - 2.3 Rear view with back plate 5
- 3.0 Product details 5**
- 4.0 Specifications 6**
- 5.0 Power up and Testing 6**
- 6.0 Label 7**
- 7.0 Installation 8**
- 8.0 Certifications 9**
 - 8.1 FCC..... 9
 - 8.2 IC 9
 - 8.3 UL 294 9
 - 8.3.1 Access control performance levels 9

uTrust Scramblepad TS

1.0 Introduction

This document details the Physical Access Control Reader **uTrust Scramblepad TS** and its basic Operational and installation procedures.

2.0 Reader

2.1 Functionality


uTrust Scramblepad TS is a physical access control smart card reader that can read HF and LF contactless credentials, conforming to the following standards: ISO 14443 A & B, ISO15693 with a Randomly displayed keypad pin entry for additional security. The reader can interface with an access control system equipped with a RS-Hirsch serial interface. Only Listed Identiv control units are compatible for use with the DS47L-SSP-TS.

2.2 Front/Top Casing



uTrust Scramblepad TS

2.3 Rear view with back plate

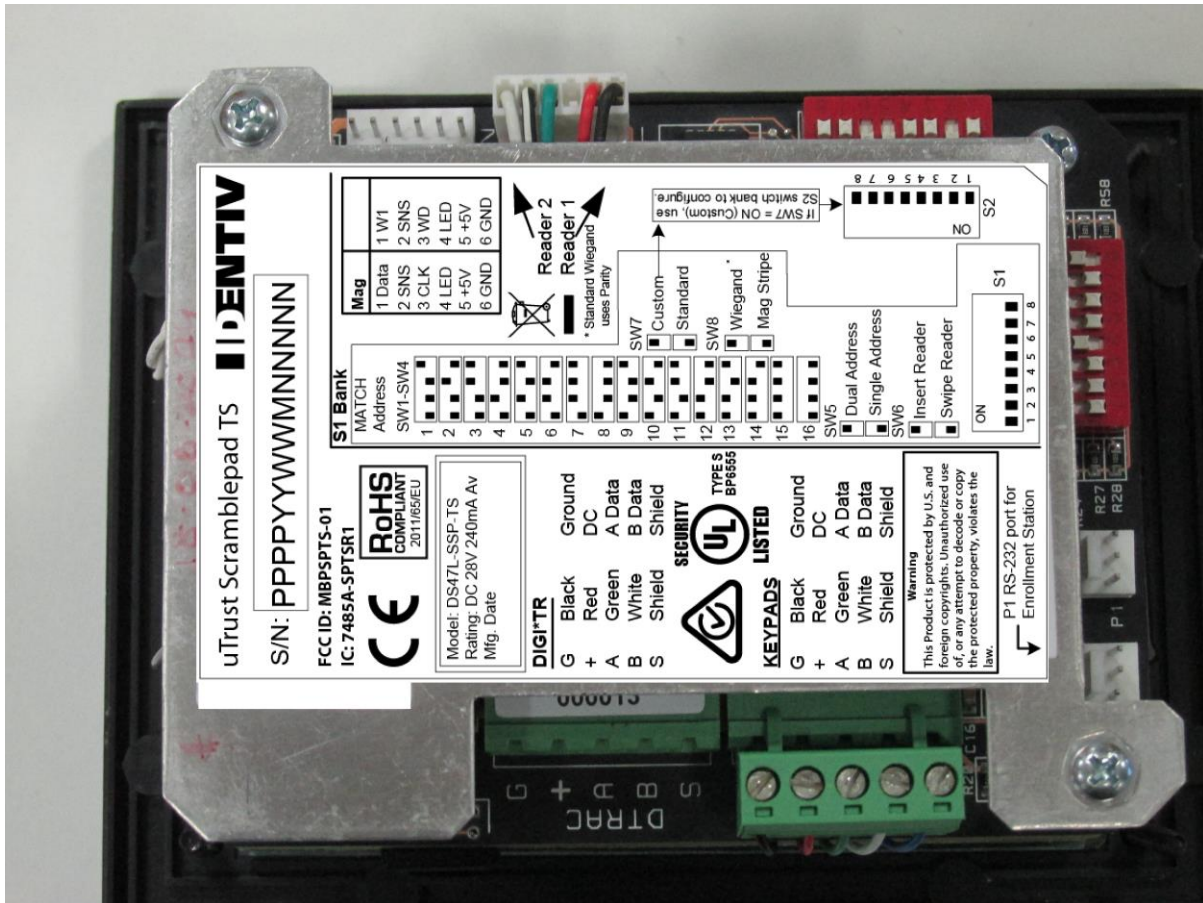

3.0 Product details

Product Name	: uTrust Scramblepad TS
Model Name	: DS47L-SSP-TS
Device Type	: RFID reader, 13.56MHz (HF) / 125 KHz (LF), keypad Physical Access control Reader (accessory equipment)
Type of equipment	: Suitable for Indoor use
Interface Type	: Phoenix connectors
Voltage Rating	: 28V DC
Current Rating @28 V	: 240 mA
Communication protocol	: RS-HIRSCH protocol

uTrust Scramblepad TS

4.0 Specifications

Wiring methods shall be in accordance with the National Electrical Code (ANSI/NFPA70), local codes, and the authorities having jurisdiction.

Model	Op Voltage	Current @ 12V	Op temp	Operating humidity
DS47L-SSP-TS	28 VDC	240 mA	0 to +49 deg C	85 +/-5 % RH

- Class 2 power source with 28VDC to be used to power the reader
- Only listed Identiv control units are compatible for use with the DS47L-SSP-TS


5.0 Power up and Testing

- 1 **Turn power on**
Beep sound comes.
- 2 **Present a card**
HF card, LF card
The green LED glows when passed, RED LED when failed with a short Beep
- 3 **Press Start Key**
Scrambling display with buzzer tone & displays scrambled key

This is the default reader behavior.


uTrust Scramblepad TS

6.0 Label

uTrust Scramblepad TS


S/N: PPPPYYWWMNNNNN

FCC ID: MBPSPTS-01
IC: 7485A-SPTSR1



RoHS
COMPLIANT
2011/65/EU

Model: DS47L-SSP-TS
Rating: DC 28V 240mA Av
Mfg. Date

S1 Bank

MATCH Address

SW1-SW4

1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

SW7

Custom

Standard

SW8

Wiegand *

Mag Stripe

SW5

Dual Address

Single Address

SW6

Insert Reader


Swipe Reader

ON


S1

1 2 3 4 5 6 7 8

Mag	
1 Data	1 W1
2 SNS	2 SNS
3 CLK	3 WD
4 LED	4 LED
5 +5V	5 +5V
6 GND	6 GND



Reader 2



Reader 1

* Standard Wiegand uses Parity

SW7

Custom →

If SW7 = ON (Custom), use S2 switch bank to configure.


ON

S2

1 2 3 4 5 6 7 8

DIGI*TR

G	Black	Ground
+	Red	DC
A	Green	A Data
B	White	B Data
S	Shield	Shield



SECURITY

TYPE S
BP6555

KEYPADS LISTED

G	Black	Ground
+	Red	DC
A	Green	A Data
B	White	B Data
S	Shield	Shield

Warning



This Product is protected by U.S. and foreign copyrights. Unauthorized use of, or any attempt to decode or copy the protected property, violates the law.

↓ P1 RS-232 port for Enrollment Station

uTrust Scramblepad TS

7.0 Installation

- Install the respective mounting box in to the wall
- Take the cable from the backside of the reader as per the pin outs in the label drawing
- Fix the four screws at the corner into the mounting box
- Fix the bezel on the top of the installed reader

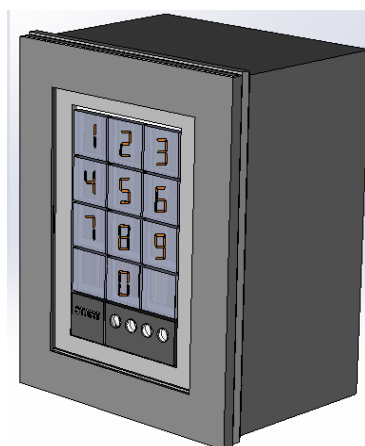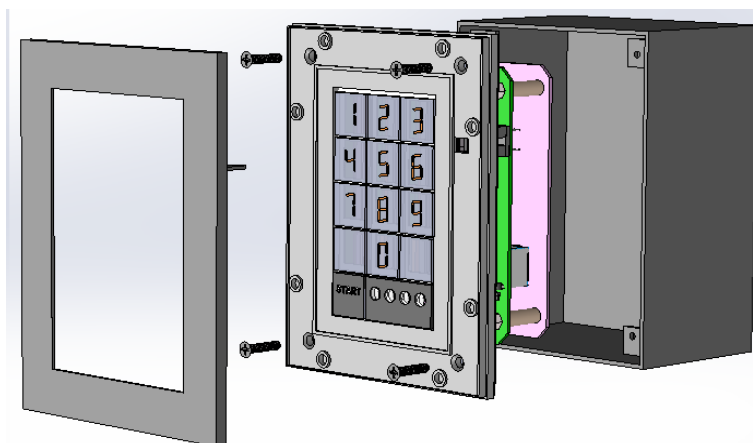

uTrust Scramblepad TS

8.0 Certifications

8.1 FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Information to user

Changes or modifications not expressly approved by *Identiv* could void the user's authority to operate the equipment.

8.2 IC

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

8.3 UL 294

8.3.1 Access control performance levels

Destructive attack	: Level IV
Line Security	: Level I
Endurance	: Level I
Standby Power	: Level I